


FIG. 1 is a schematic diagram of a conventional art generator control system.

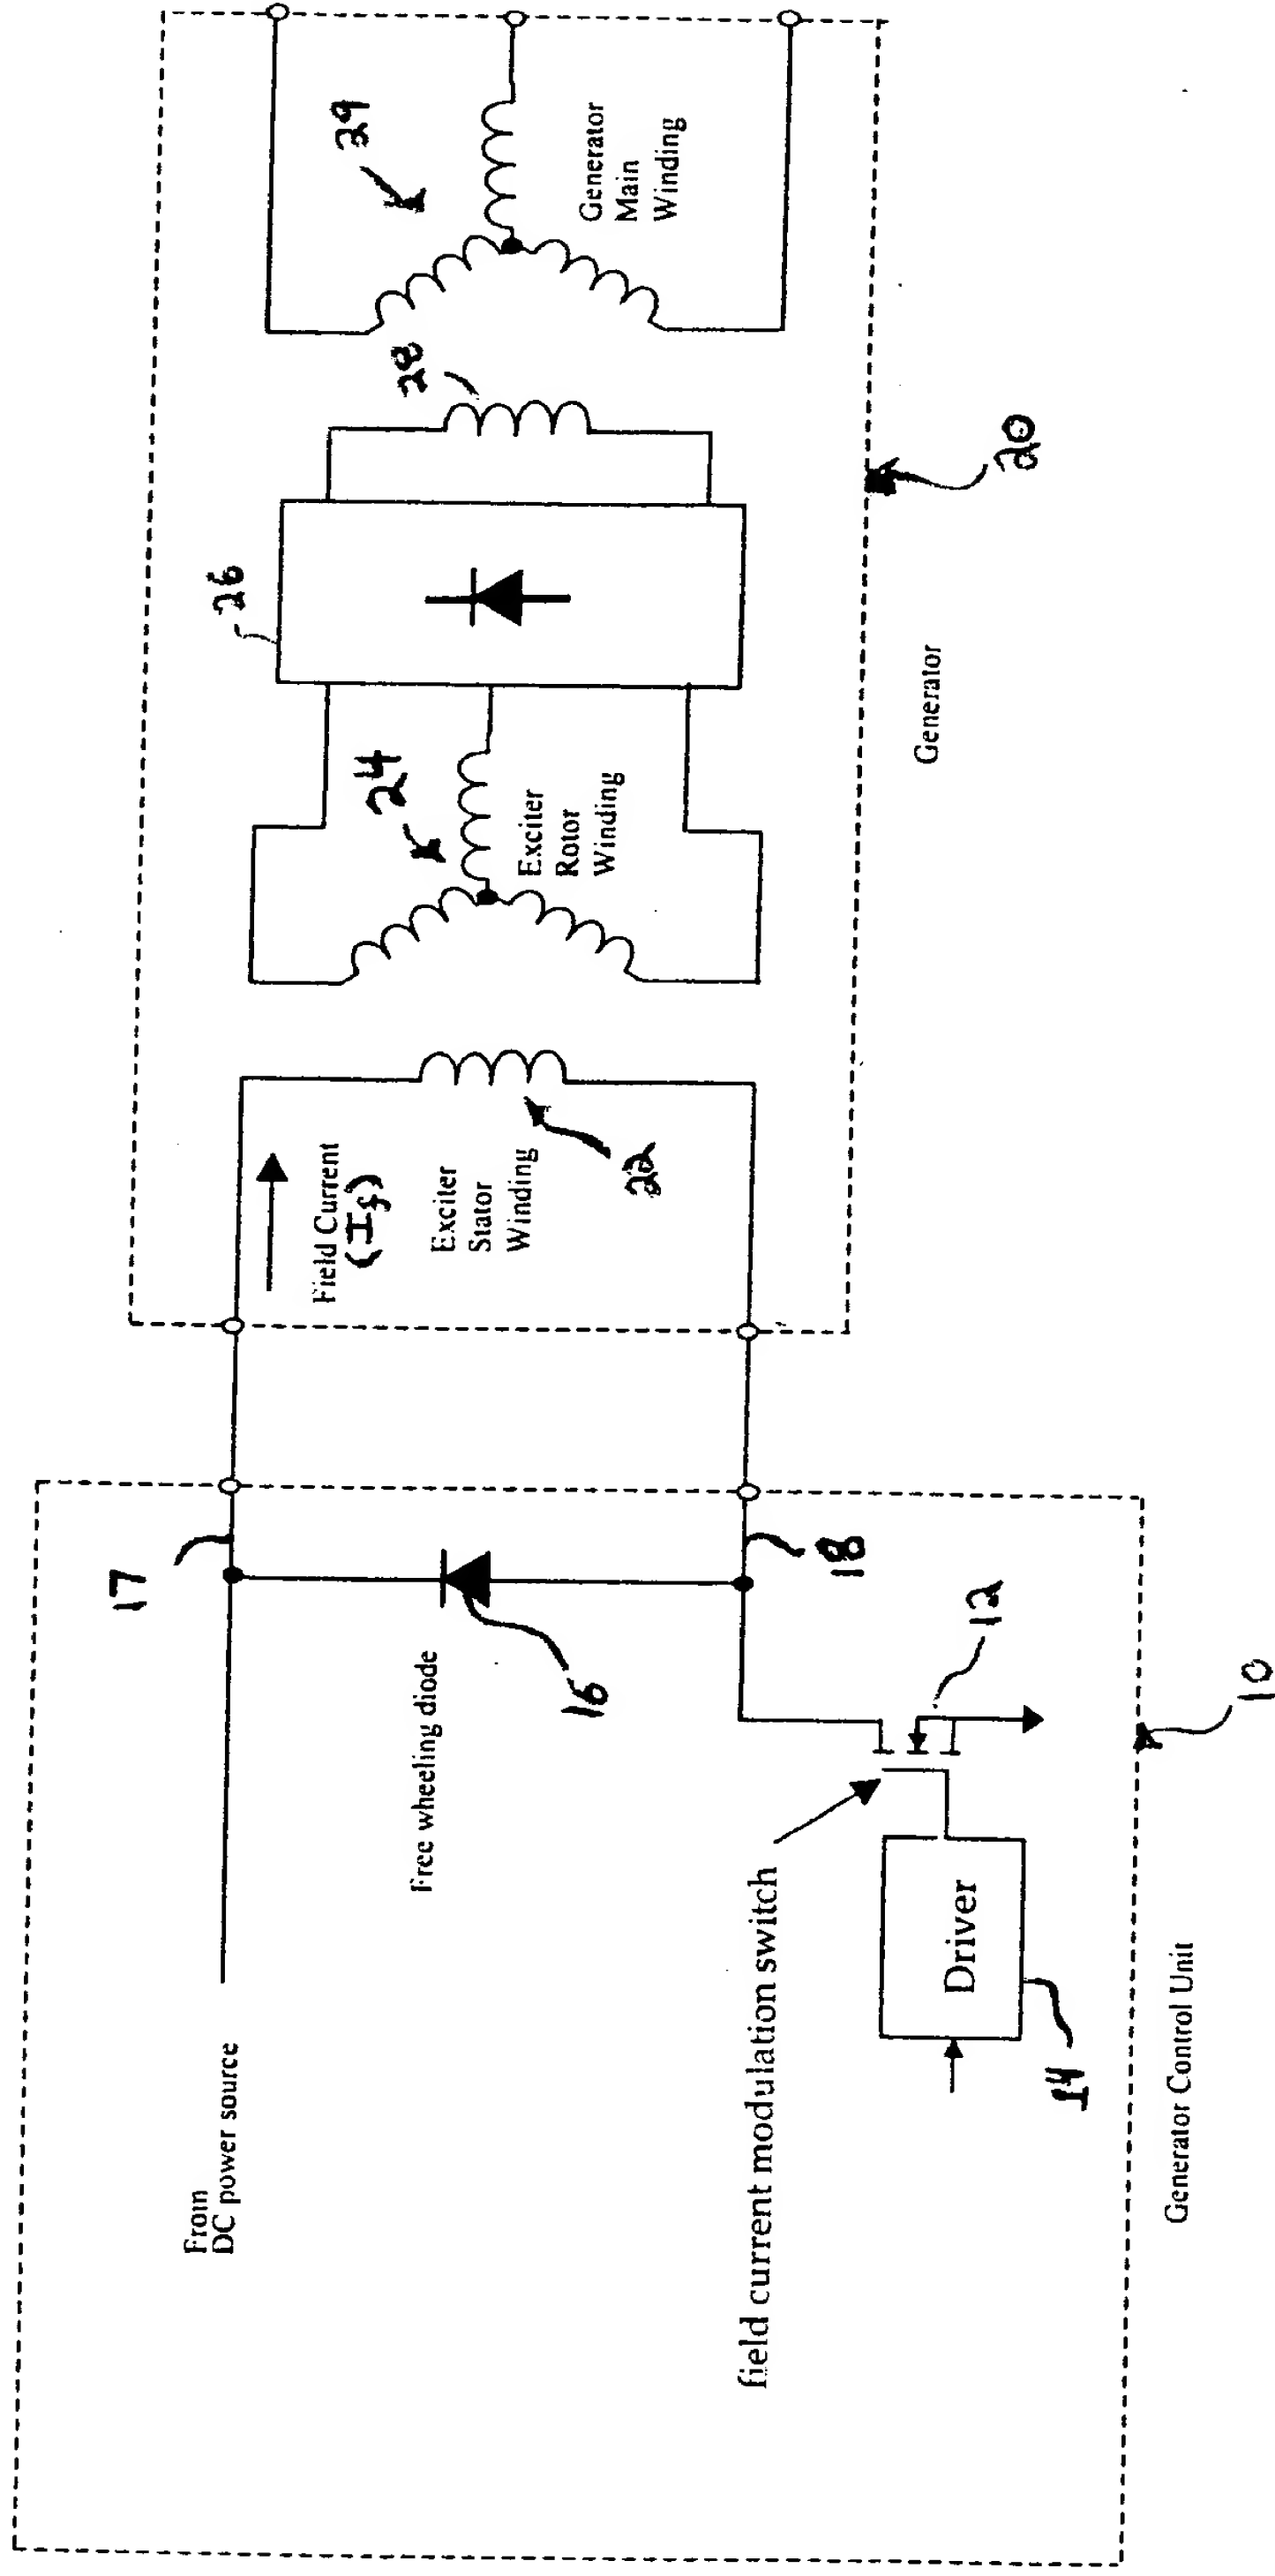

CONVENTIONAL ART

FIG. 1

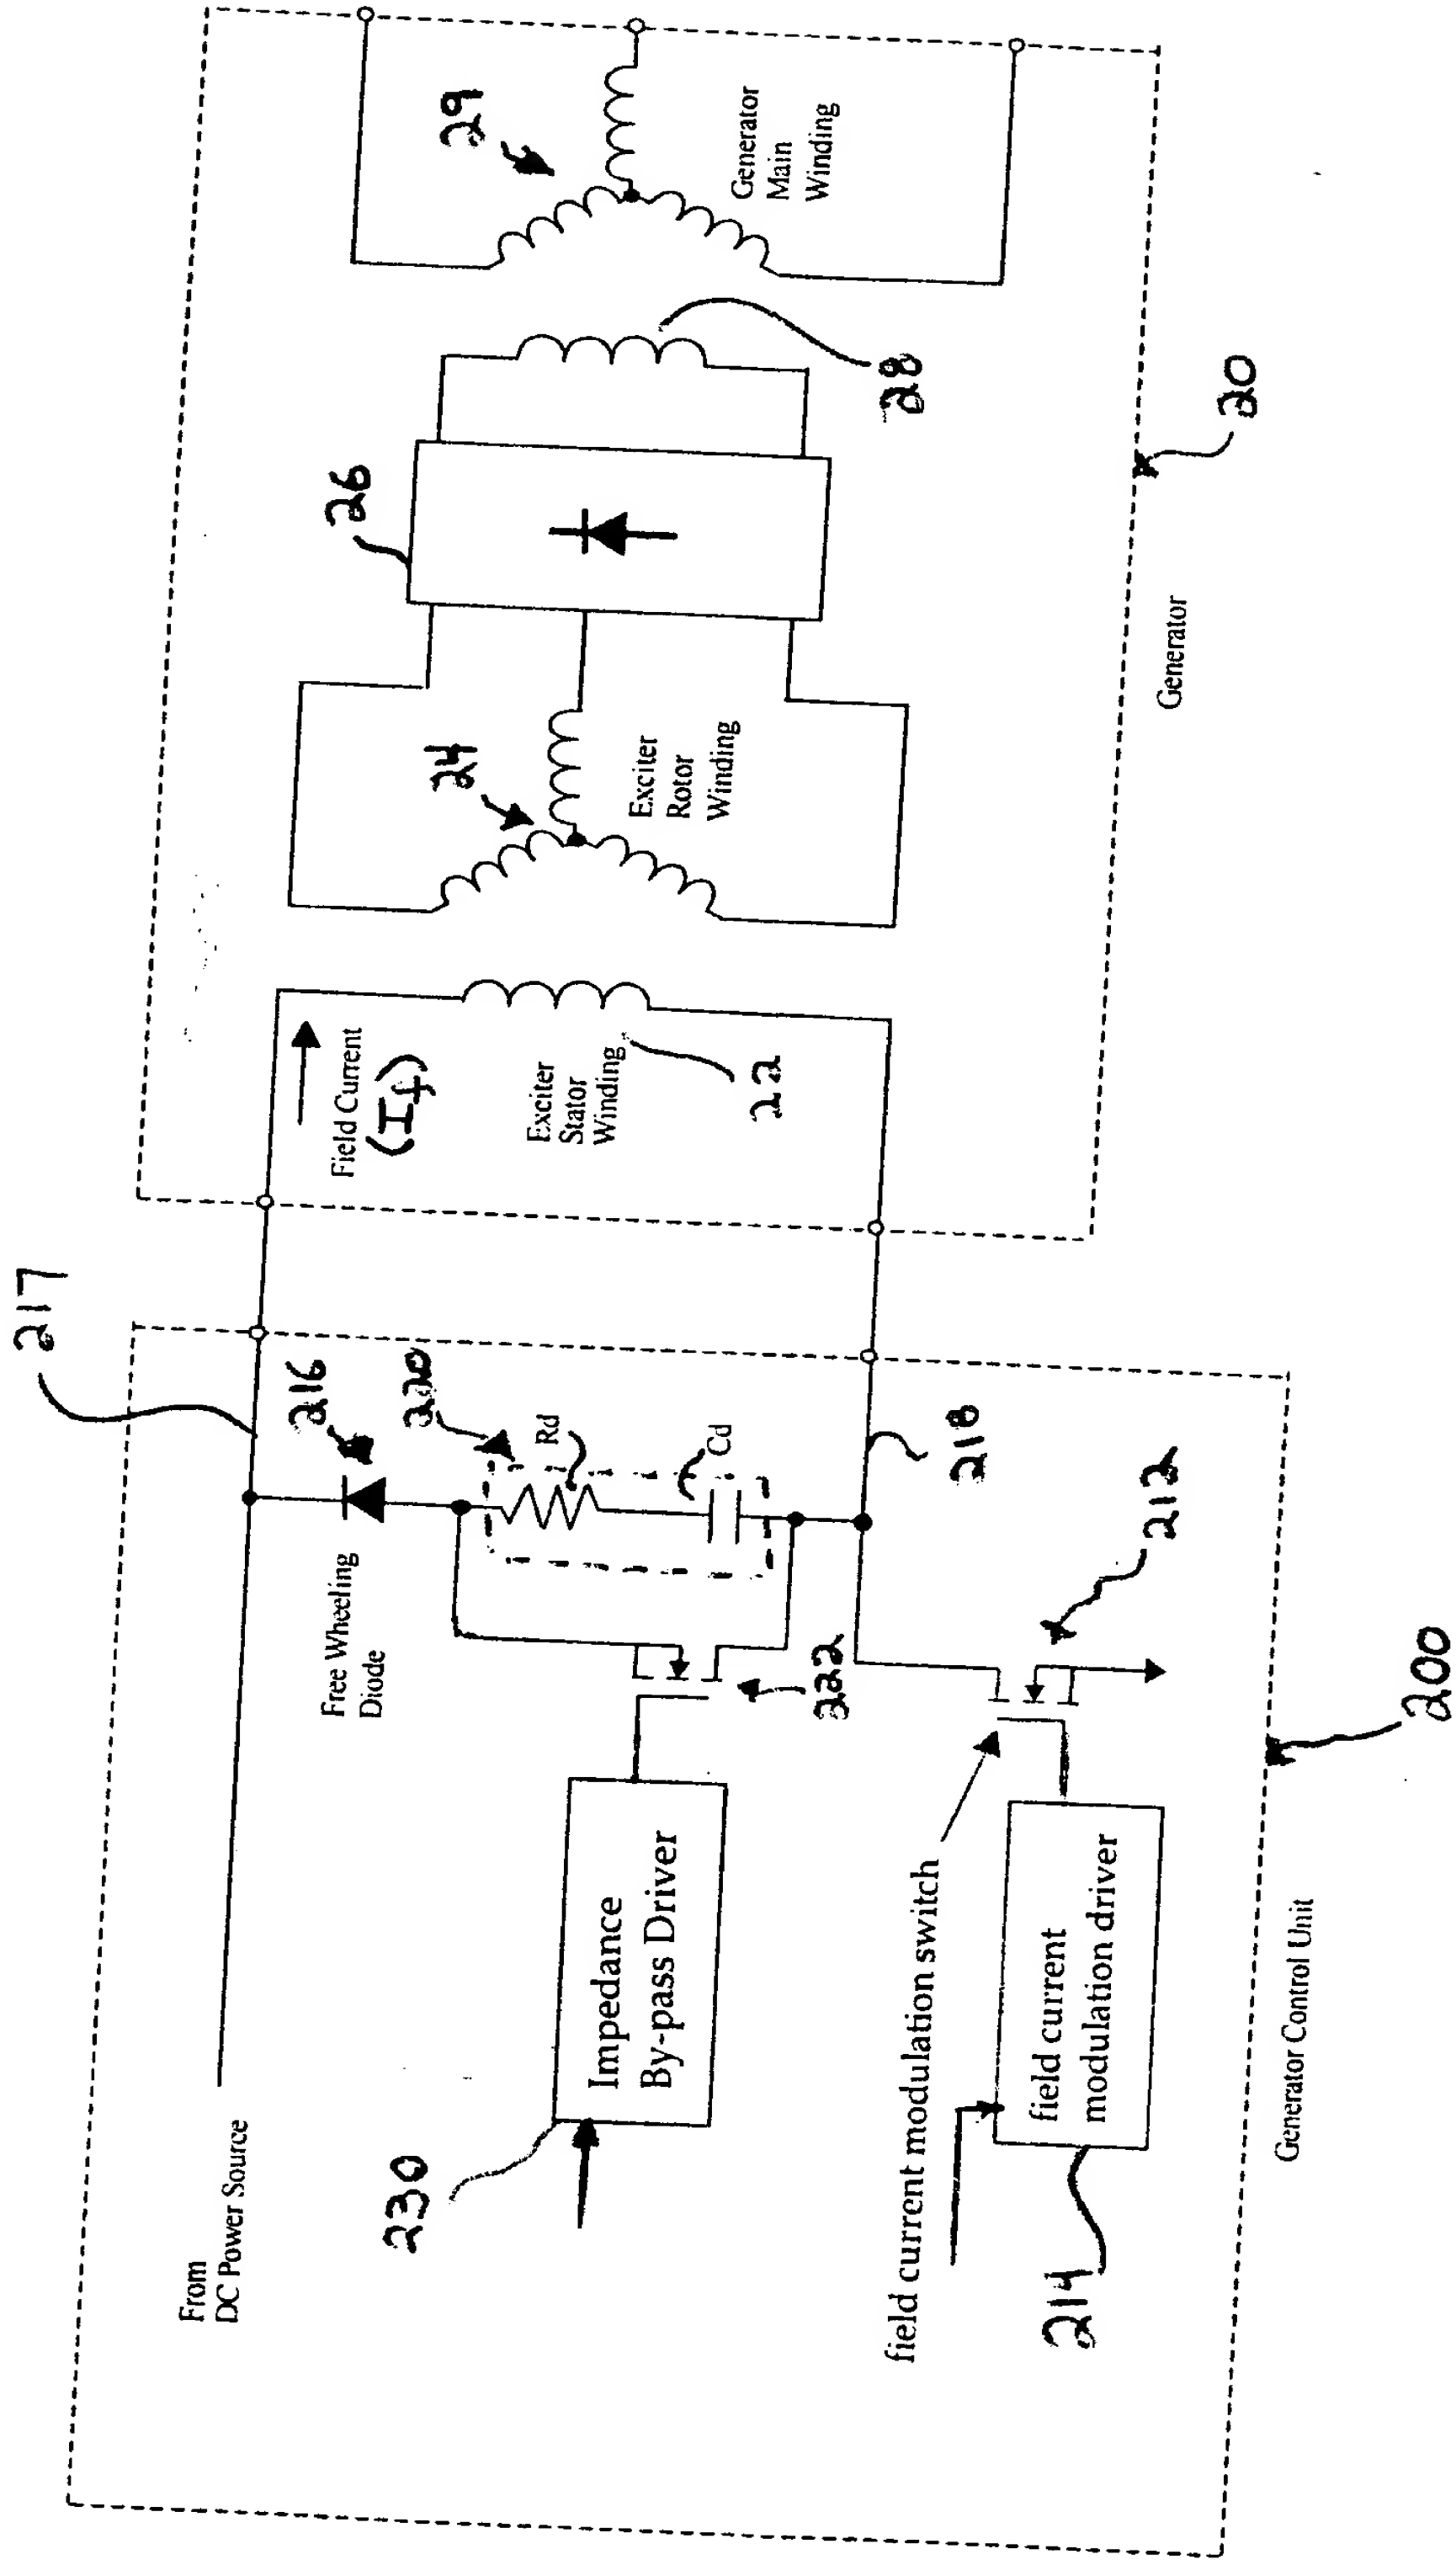


FIG. 2

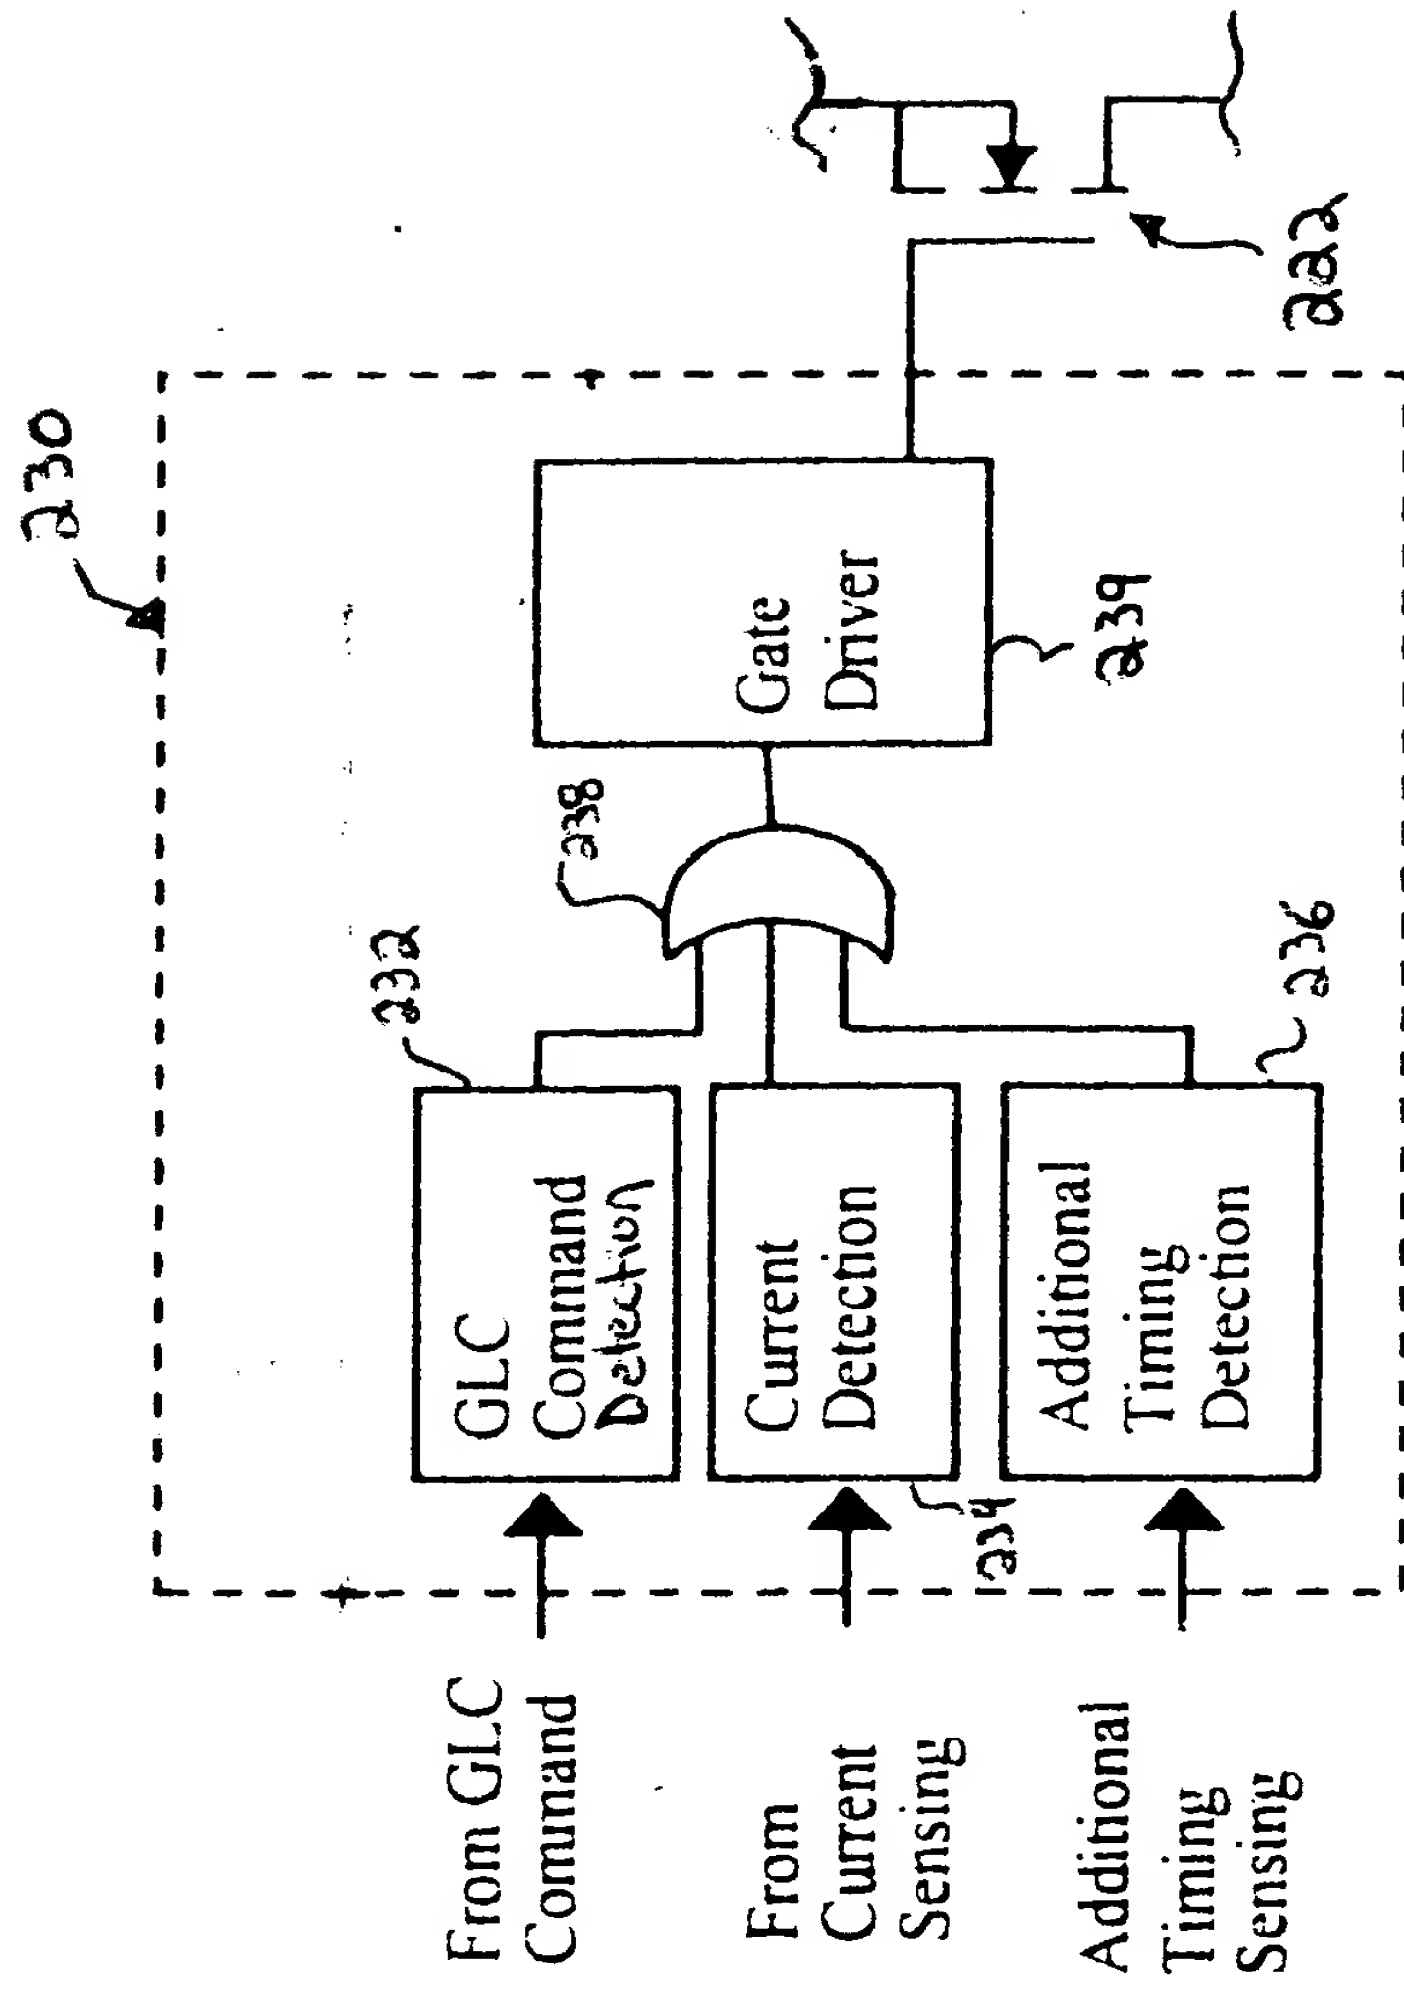


FIG. 3

Load-off Transient (without acceleration)

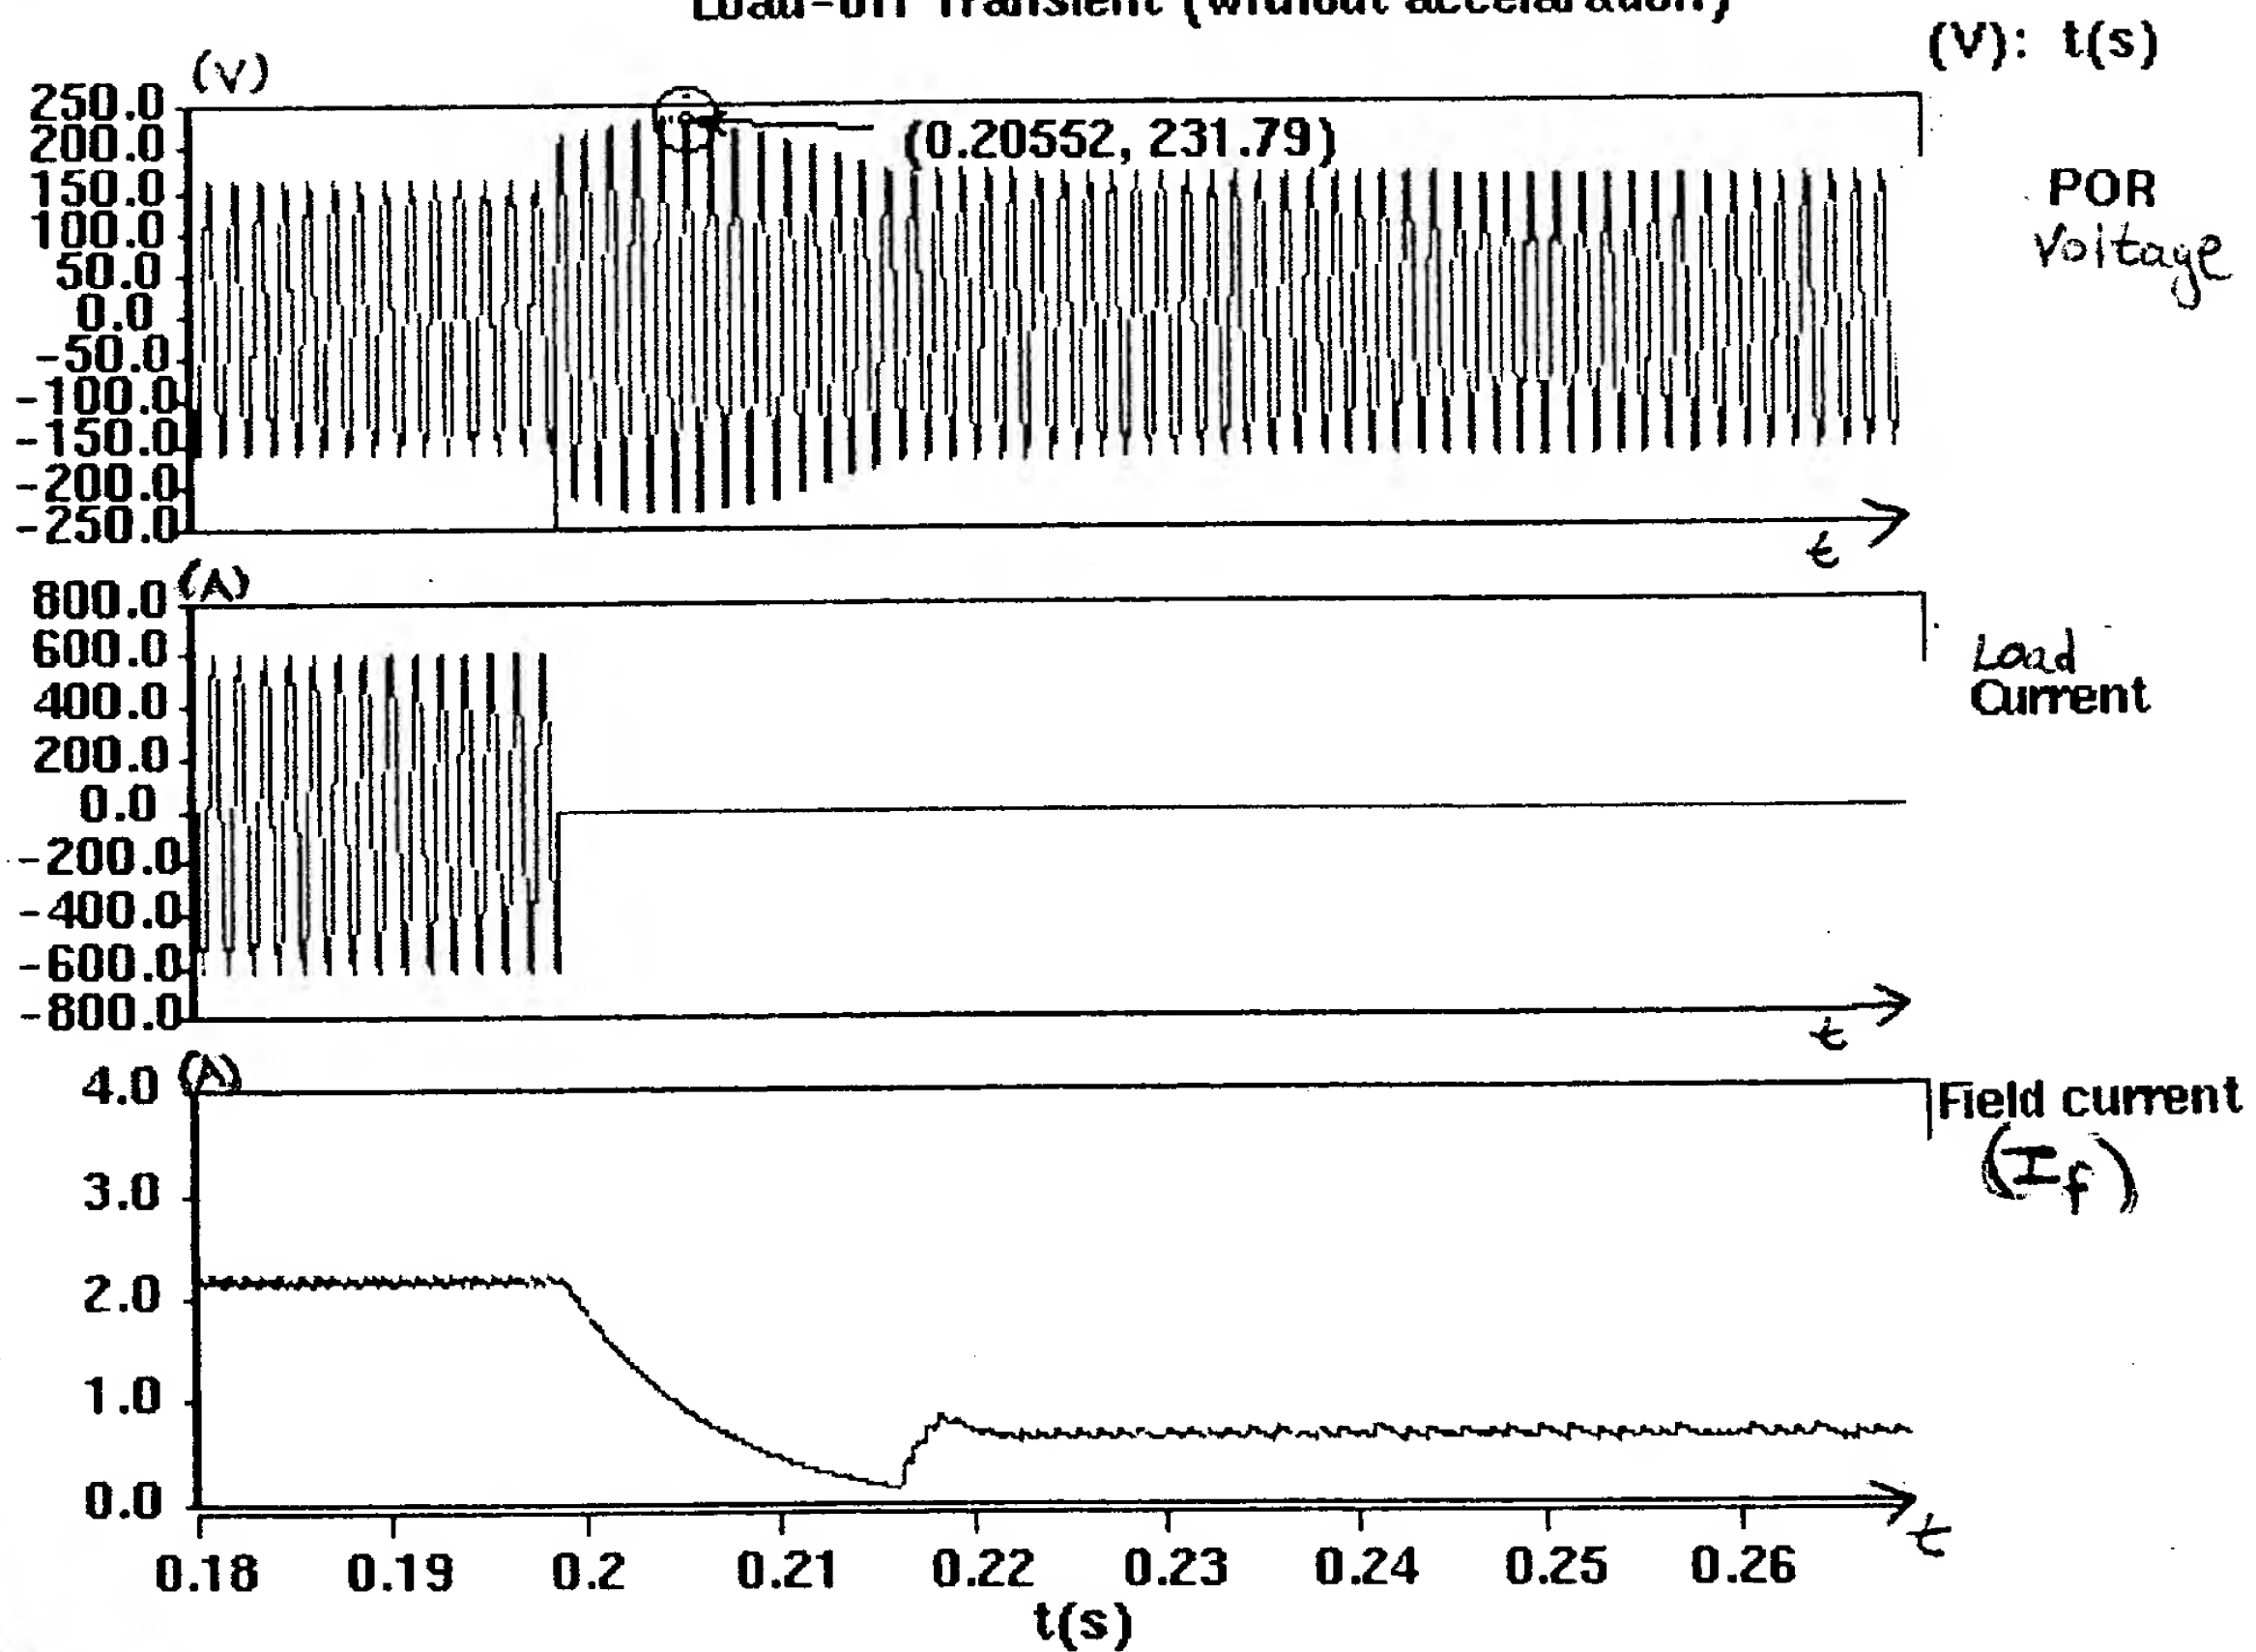


FIG. 4A

Load-off Transient (with acceleration)

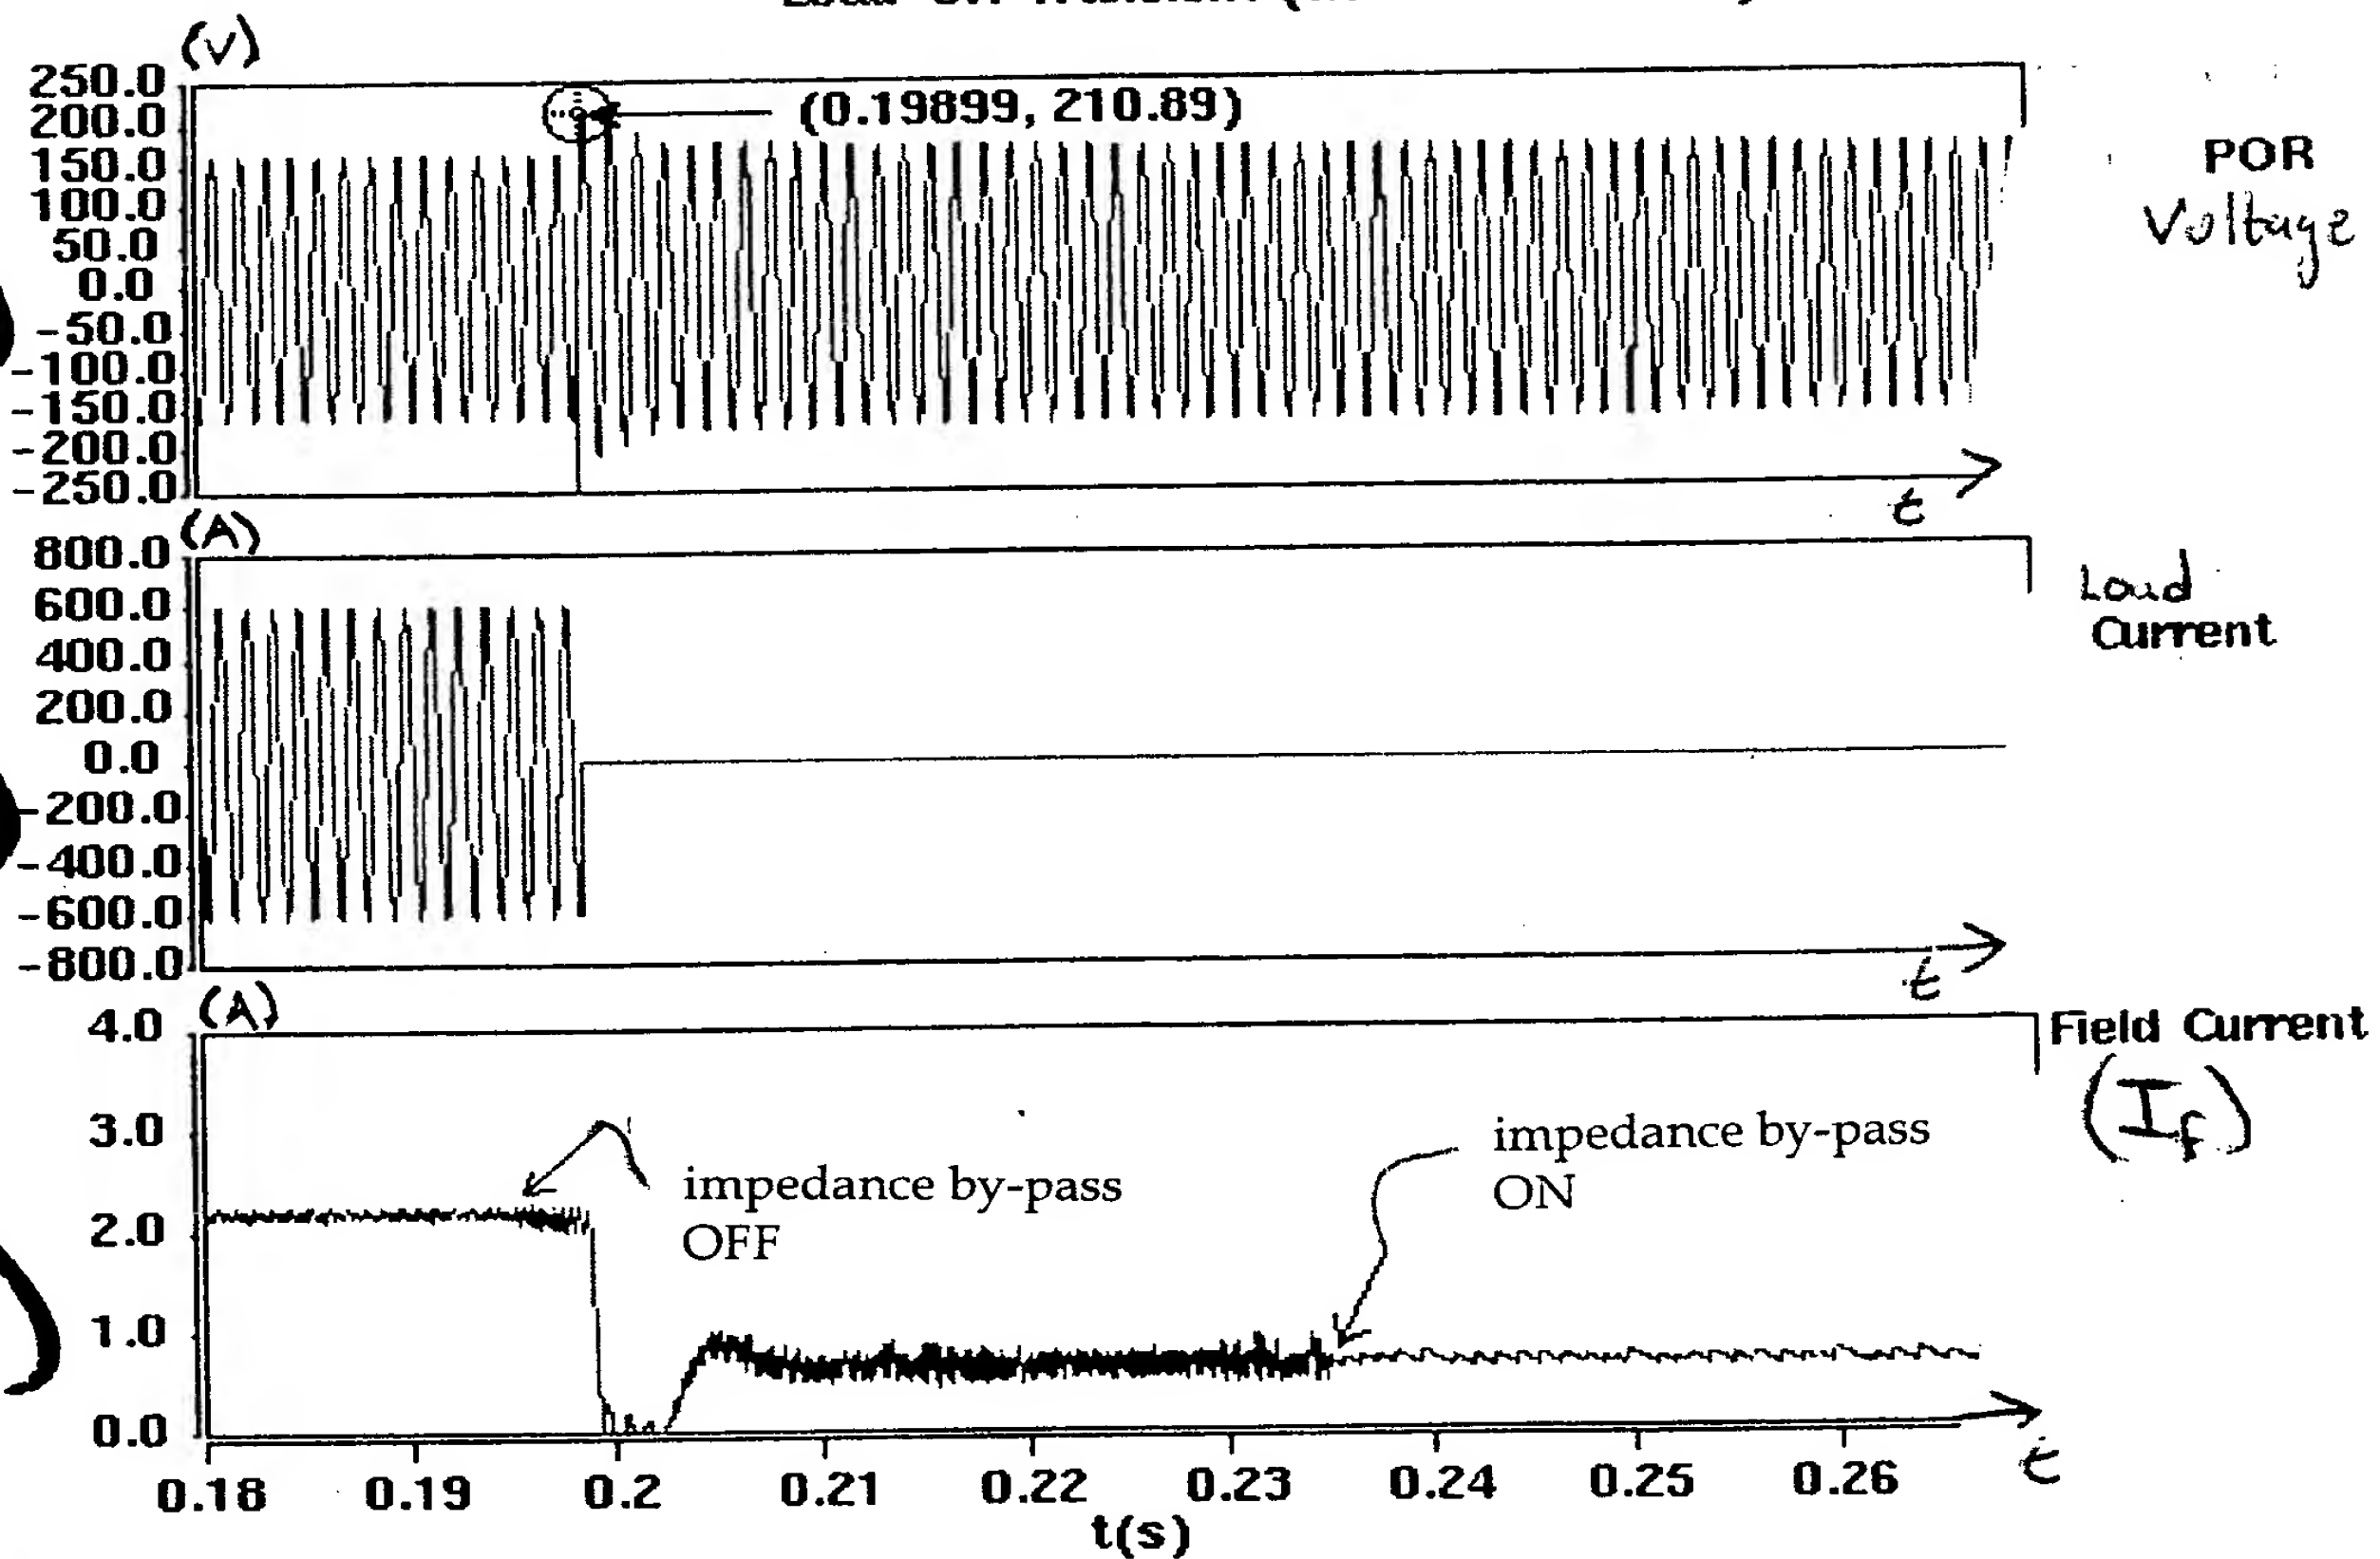


FIG. 4B